

Solid-state Repeat Cycle Timer

H3CR-F

1/16 DIN Solid-state Repeat Cycle Timer

- Wide power supply ranges of 100 to 240 VAC 24 VAC/VDC, 12VDC
- Combinations of independent long or short ON/OFF time settings are possible
- Fourteen time ranges from 0.05 s to 30 h or 1.2 s to 300 h
- Repeat cycle models with either ON start or OFF start operating functions
- Easy sequence checks through instantaneous outputs for a zero set value at any time range
- 11-pin and 8-pin models are available



Ordering Information

Timing units		0.05 s to 30 h		1.2 s to 300 h	
Terminal form		11-pin models	8-pin models	11-pin models	8-pin models
Supply voltages		100 to 240 VAC, 24 VAC/DC, 12 VDC			
Operating mode		Repeat cycle			
Part number	Repeat cycle OFF start	H3CR-F	H3CR-F8	H3CR-F-300	H3CR-F8-300
	Repeat cycle ON start	H3CR-FN	H3CR-F8N	H3CR-FN-300	H3CR-F8N-300

Note: Specify both the model number and supply voltage when ordering.

Example: H3CR-F 24 VAC/DC

Supply voltage

MODEL NUMBER LEGEND

H3CR - -

1 2 3 4

1. Classification

F: Repeat cycle timers

2. Configuration

None: 11-pin socket

8: 8-pin socket

3. Repeat cycle mode

None: OFF start

N: ON start


4. Specified Type

300: Long time range (1.2 s to 300 h) type

■ ACCESSORIES (ORDER SEPARATELY)

Description	Part number
Panel mounting adapters	Fits behind panel, ideal for side by side installation. Use P3G-08 socket. Y92F-30
	Installs through panel front; timer face fits bezel, rear of timer clips to adapter. Use P3G-08 socket. Fits 65-66 mm (2.56-2.59 in) x 52-53 mm (2.04-2.09 in) panel cutout. Charcoal gray face plate measures 88 H x 58 W mm (3.46 x 2.28 in) Y92F-73
	Installs through panel front; timer face fits bezel, rear of timer clips to adapter. Use P3G-08 socket. Fits 55 x 45 mm (2.17 x 1.77 in) panel cutout. Charcoal gray face plate measures 58 H x 50 W mm (2.28 x 1.97 in) Y92F-74
Mounting track	DIN rail, 50 cm (1.64 ft) length, 7.3 mm (0.29 in) depth PFP-50N
	DIN rail, 1 m (3.28 ft) length, 7.3 mm (0.29 in) depth PFP-100N
	DIN rail, 1 m (3.28 ft) length, 16 mm (0.63 in) depth PFP-100N2
	End Plate PFP-M
	Spacer PFP-S
Protective Cover	Hard plastic cover protects against dust, dirt and water; not for use with panel covers. Y92A-48B
Sockets	Bottom surface or track mounting, top screw terminals. Use with 8-pin terminal form timer. P2CF-08
	Bottom surface or track mounting, top screw terminals. Use with 11-pin terminal form timer. P2CF-11
	Back mounting, for use with Y92F-30 mounting adapter, bottom screw terminals. Use with 8-pin terminal form timer. P3G-08
	Back mounting, for use with Y92F-30 mounting adapter, bottom screw terminals. Use with 11-pin terminal form timer. P3GA-11

■ RANGE SELECTION

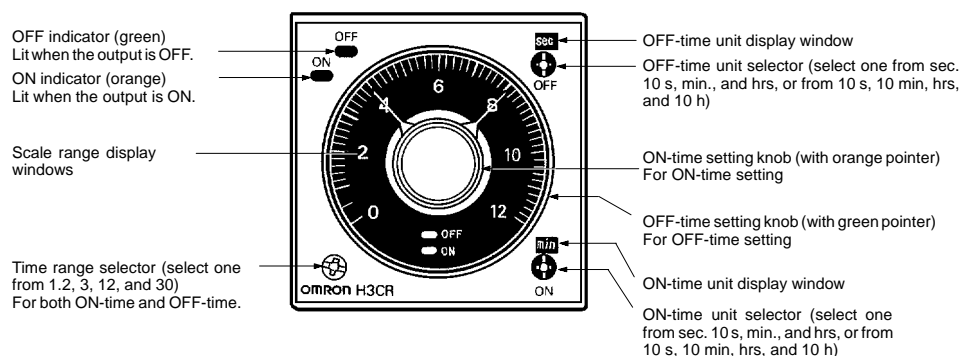

0.05 s to 30 h models

Time range	Time units			
	s (sec)	x 10 s (10 s)	min	h (hrs)
1.2	0.05 to 1.2	1.2 to 12	0.12 to 1.2	
3	0.3 to 3	3 to 30	0.3 to 3	
12	1.2 to 12	12 to 120	1.2 to 12	
30	3 to 30	30 to 300	3 to 30	

Note: Instantaneous output is available at any time range. To obtain instantaneous output, set to below 0.

1.2 s to 300 h models

Time range	Time units			
	x 10 s (10 s)	x 10 min (10 min)	h (hrs)	x 10 h (10 h)
1.2	1.2 to 12	1.2 to 12	0.12 to 1.2	1.2 to 12
3	3 to 30	3 to 30	0.3 to 3	3 to 30
12	12 to 120	12 to 120	1.2 to 12	12 to 120
30	30 to 300	30 to 300	3 to 30	30 to 300


Note: Instantaneous output is available at any time range. To obtain instantaneous output, set to below 0.

Specifications

Part number		H3CR-F/-F-300	H3CR-F8/-F8-300	H3CR-FN/-FN-300	H3CR-F8N/-F8N-300
Operating mode		OFF start		ON start	
Supply voltage (see note)	AC	100 to 240 VAC (50/60 Hz)			
	AC/DC	24 VAC/DC (50/60 Hz)			
	DC	12 VDC			
Operating voltage range		85% to 110% of rated supply voltage, 90% to 110% with 12-VDC models			
Power consumption	AC	100 to 240 VAC: 10 VA (100 VAC applied)			
	AC/DC	24 VAC/DC: 2 VA (24 VAC applied)/1 W (24 VDC applied)			
	DC	12 VDC: 1 W			
Start, Reset, Gate inputs		ON-impedance: 1 kΩ max. ON residual voltage: 1 V max OFF impedance: 500 kΩ min.			
Control outputs	Type	DPDT relay			
	Max. load	5 A at 250 VAC, p.f. = 1			
	Min. load	10mA at 5 VDC			
Repeat accuracy		±0.3% full scale max. (±0.3% full scale max. ±10 ms in ranges of 1.2 and 3 s)			
Setting error		±5% full scale max ±0.05 s max.			
Resetting system		Time-limit operation/time-limit reset or self-reset			
Resetting time		Minimum power-opening time: 0.1 sec			
Indicators		Output ON indicator (orange LED), output OFF indicator (green LED)			
Materials		Plastic case (light gray Munsell 5Y7/1)			
Mounting		Panel, DIN track, or surface depending on socket selected			
Connections		11-pin round socket	8-pin round socket	11-pin round socket	8-pin round socket
Weight		Approx. 100 g (4.23 oz.)			
Approvals		UL/CSA/(EMC)/(LV)			
Ambient temperature	Operating	-10° to 55°C (14° to 131°F) with no icing			
	Storage	-25° to 65°C (-13° to 149°F) with no icing			
Humidity		35% to 85%			
Vibration	Mechanical durability	10 to 55 Hz with 0.75-mm single amplitude each in three directions			
	Malfunction durability	10 to 55 Hz with 0.5-mm single amplitude each in three directions			
Shock	Mechanical durability	980 m/s ² (100G) each in three directions			
	Malfunction durability	98 m/s ² (10G) each in three directions			
Variation due to voltage change		±0.5% full scale max. (±0.5% full scale max. ±10 ms in ranges of 1.2 and 3 s)			
Variation due to temperature change		±2% full scale max. (±2% full scale max. ±10 ms in ranges of 1.2 and 3 s)			
Service life	Mechanical	20 million operations min. (under no load at 1,800 operations/h)			
	Electrical	100,000 operations min. (5 A at 250 VAC, resistive load at 1,800 operations/h)			
Insulation resistance		100 MΩ min. (at 500 VDC)			

Note: A power supply with a ripple of 20% max. (single-phase power supply with full-wave rectification) can be used with each DC model.


Engineering Data

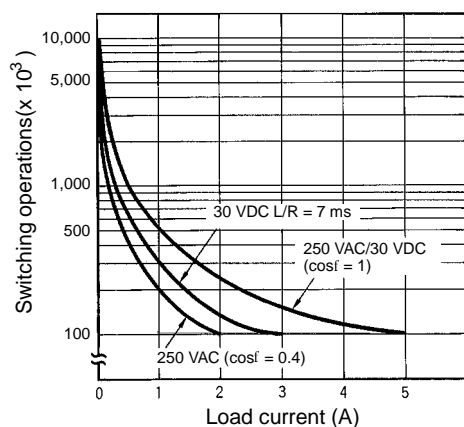

Note: A maximum current of 0.15 A can be switched at 125 VDC ($\cos\phi = 1$) and a maximum current of 0.1 A can be switched if L/R is 7 ms. In both cases, a life of 100,000 operations can be expected.
The minimum applicable load is 10 mA at 5 VDC (failure level: P).


Operation

■ BLOCK DIAGRAMS

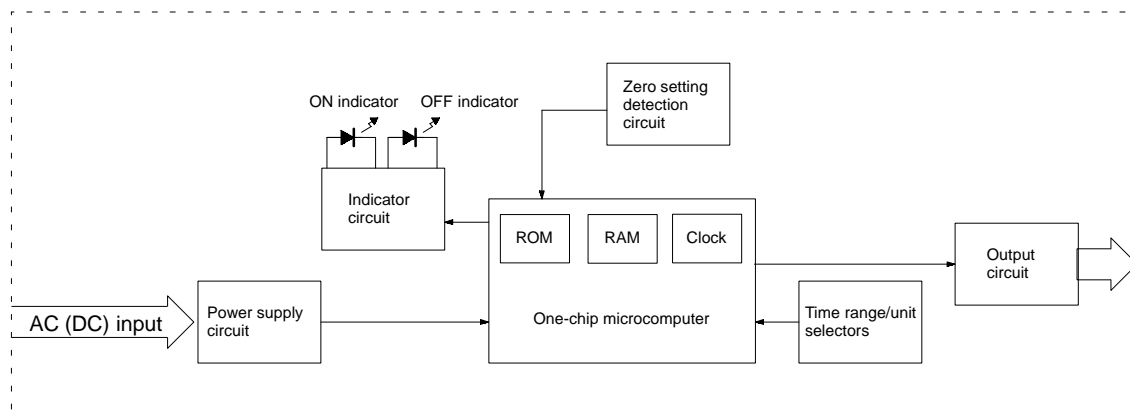


Timing Charts

H3CR-F8
H3CR-F8N
H3CR-F8-300
H3CR-F8N-300

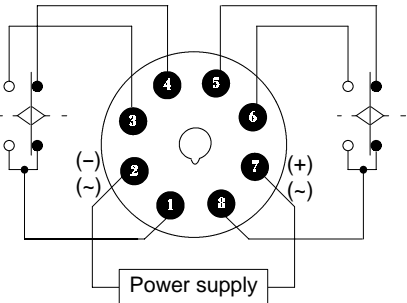

H3CR-F
H3CR-FN
H3CR-F-300
H3CR-FN-300

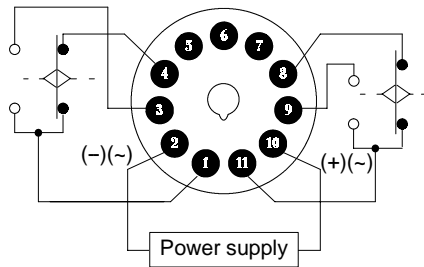

Note: Leave terminals 5, 6, and 7 open.
Do not use them as relay terminals.

Note: Part numbers with an "N" included are Repeat cycle ON start timers. All others are Repeat cycle OFF start timers.




Operating mode	Timing chart
Repeat cycle OFF start	
Repeat cycle ON start	

Dimensions




TIMERS

Unit: mm (inch)

H3CR-F
H3CR-FN
H3CR-F-300
H3CR-FN-300

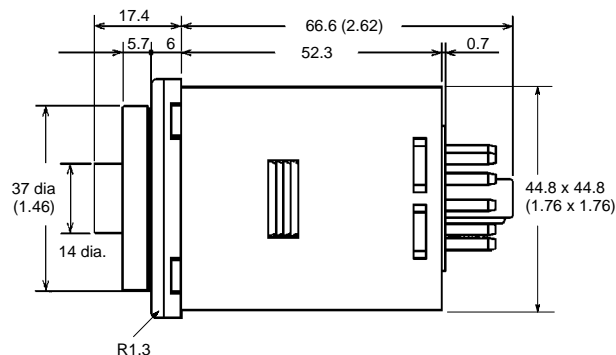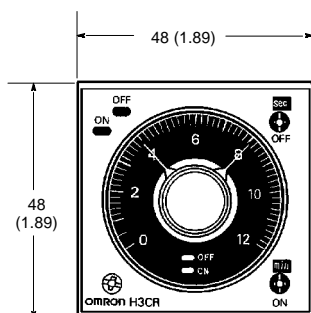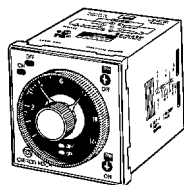


H3CR-F8
H3CR-F8N
H3CR-F8-300
H3CR-F8N-300

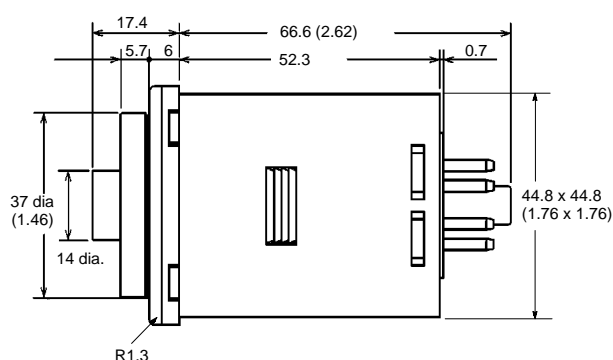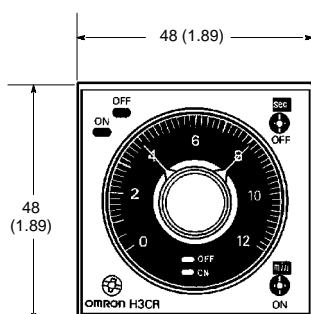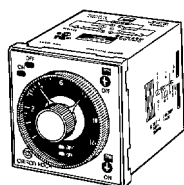


TRACK MOUNTING

11-pin models
P2CF-11

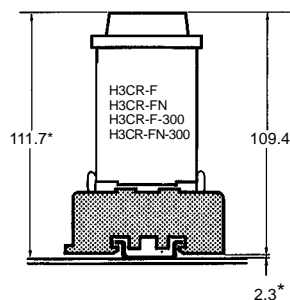


8-pin models
P2CF-08

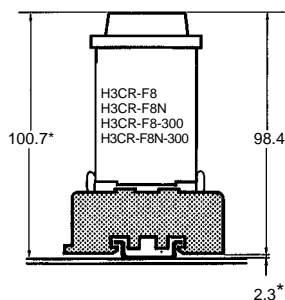


*These dimensions vary with the kind of DIN track (reference value).

PANEL MOUNTING

11-pin models

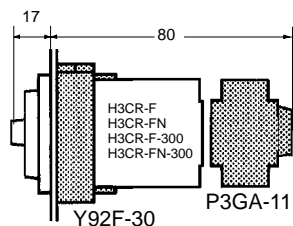

8-pin models

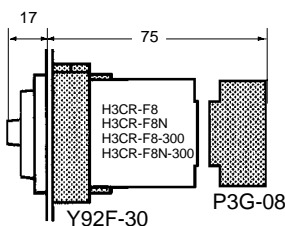


■ PANEL MOUNTING ADAPTERS

Unit: mm (inch)


Y92F-30

Adapter installs behind the panel. It is ideal for side by side installation. Use P3G-11 or P3G-08 sockets.

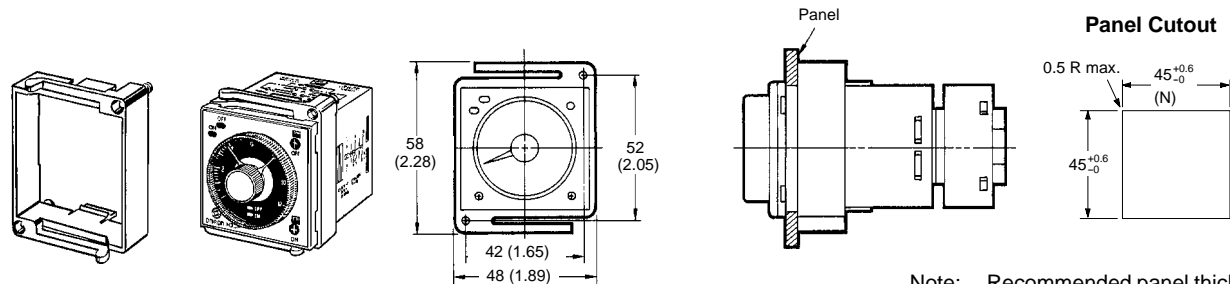


Note: Recommended panel thickness is 1 to 3.2 mm.

Y92F-73

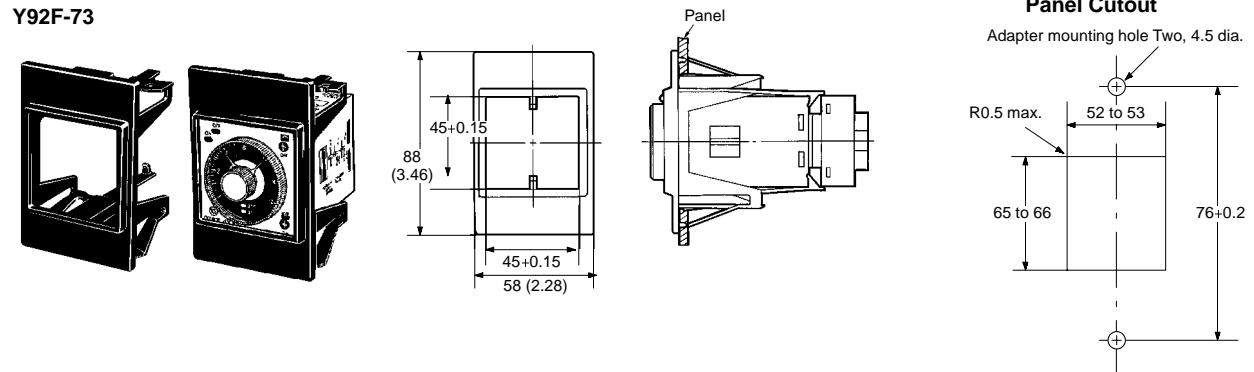

Note: The mounting panel thickness should be 1 to 3.2 mm.

Y92F-74

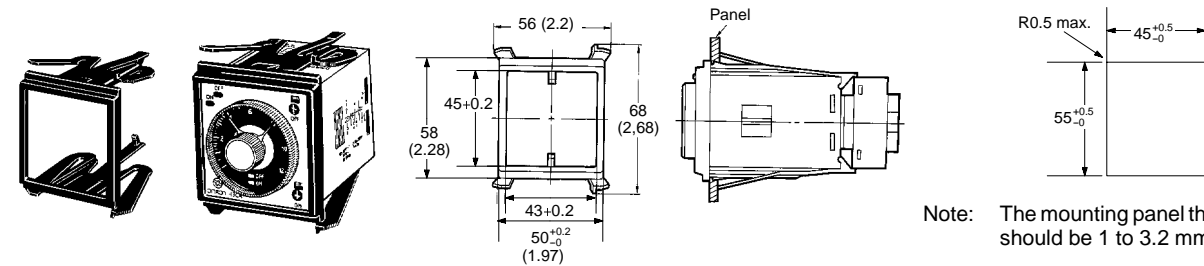


Note: The mounting panel thickness should be 1 to 3.2 mm.


SOCKETS

Track mounting/front connecting socket


P2CF-08

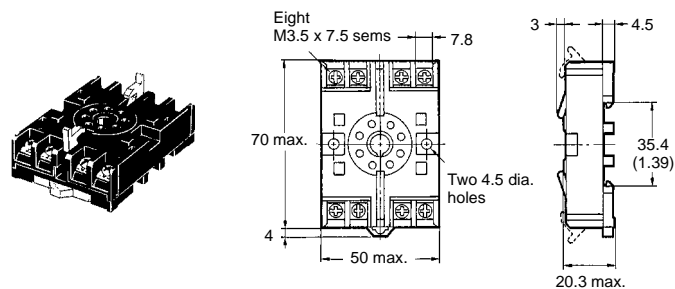



 
Terminal Arrangement/ Internal Connections (Top View)



Surface Mounting Holes

 


P2CF-11

  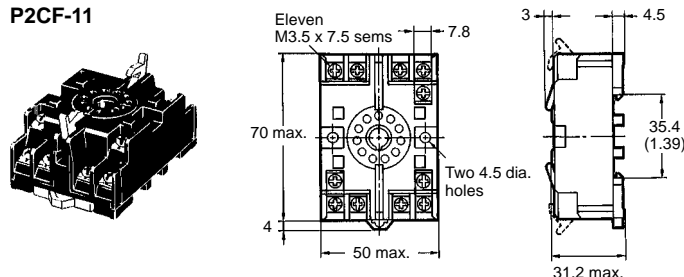


Back mounting socket



P3G-08

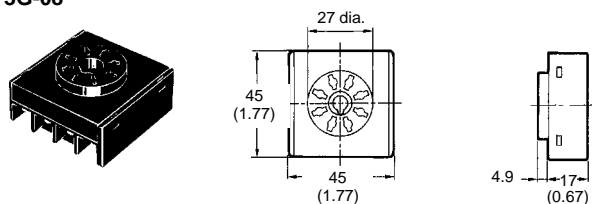

 Terminal Arrangement/ Internal Connections (Bottom View)




P3GA-11

 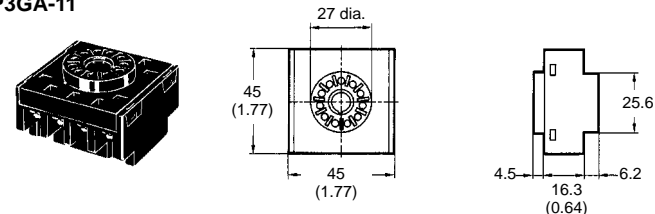

PROTECTIVE COVER


Y92A-48B

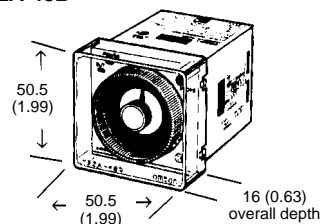


The hard plastic protective cover prevents accidental resetting. It also shields the front panel from dirt and water. The cover is intended for use in areas where unusual service conditions do not exist. The Y92A-48B cover cannot be used with the Y92P Panel Covers below.

■ MOUNTING TRACK AND ACCESSORIES

PFP-100N/PFP-50N

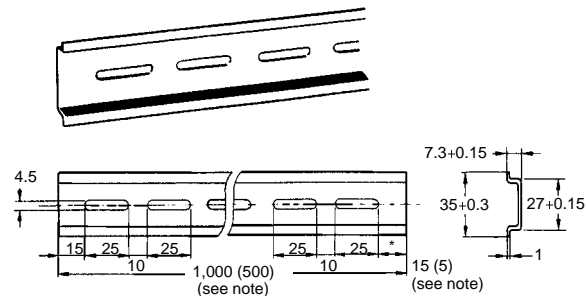


PFP-100N2

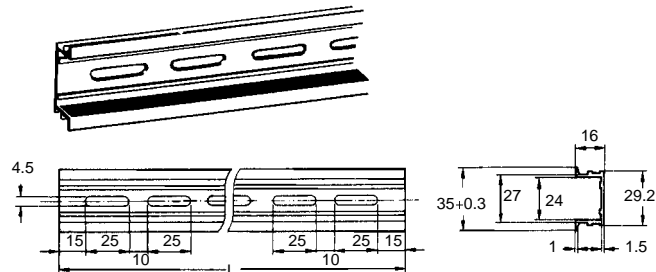


Note: The values shown in parentheses are the the PFP-50N.

PFP-M End Plate

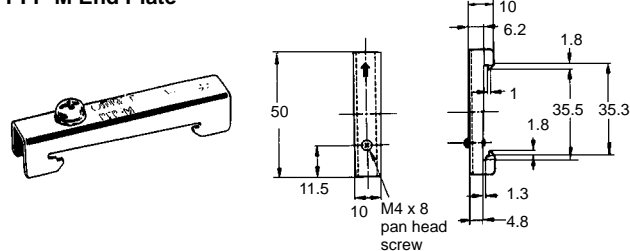

PFP-S Spacer

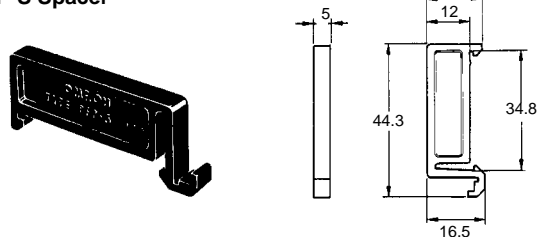

Connections

Part number	Input terminal number		Power supply terminal numbers		Output terminal numbers		
	COM	Reset	AC (common), DC -	AC (hot), DC +	COM	NC	NO
H3CR-F8 H3CR-F8N H3CR-F8-300 H3CR-F8N-300	—	—	2	7	1 8	4 5	3 6
H3CR-F H3CR-FN H3CR-F-300 H3CR-FN-300	—	—	2	10	1 11	4 8	3 9

Installation

■ INPUT CONNECTIONS

(H3CR-F□□-□□□)

The neutral or common of the power supply is connected to terminal 2. Terminal 7 of H3CR-F 8-pin terminals and terminal 10 of H3CR-F 11-pin terminals should be connected to the "hot" or positive of the power supply.

■ OUTPUT CONNECTIONS

(H3CR-F□□-□□□)


Design your control circuit using the relay contacts to switch the load. **Never switch a load with the contact that is being used as an input signal.** The timer's circuitry may be damaged.

SELECTING TIME RANGES

A time range (0 to 1.2, 0 to 3, 0 to 12, or 0 to 30) is selected for ON- and OFF-time using the time range selector at the lower left corner of the front panel, and the selected time range appears within the plastic frame of the time setting knob (= scale range display windows).

For ON-time, the desired time unit (sec, 10 s, min, and hrs, or 10 s, 10 min, hrs, and 10 h) is indicated in the ON-time unit display window at the lower right corner of the front panel and can be changed by turning the ON-time unit selector located below the ON-time unit display window.

For OFF-time, the desired time unit (sec, 10 s, min, and hrs, or 10 s, 10 min, hrs, and 10 h) is indicated in the OFF-time unit display window at the upper right corner of the front panel and can be changed by turning the OFF-time unit selector located below the OFF-time unit display window.

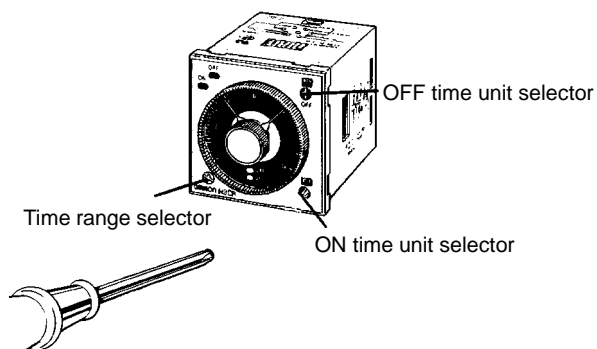


TRACK MOUNTING

Using P2CF-□□ Socket

Mounting

The P2CF-□□ socket has two hooks that secure the timer to the socket. Be sure to allow at least 20 mm (0.79 in) clearance above and below the socket to gain access to release the hooks for servicing and maintenance. Then clip rear of the socket to the track. Push the bottom onto the track until the latch hooks securely.

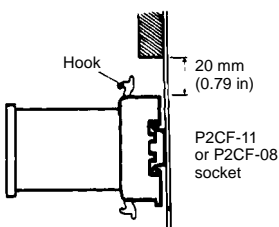



Removal

Pull the latch on the socket with a flat-blade screwdriver and remove the timer and socket as one unit.

Using Y92F-73 and Y92F-74 Adapters

Install the H3CR-H timer, face first, into the back side of the Y92F-73 or Y92F-74 adapter so the bezel fits snugly. Be sure the retaining clips at the back of the adapter fit into the slots on either side of the timer. Compress the top and bottom tabs of the adapter then push the adapter through the front side of the panel cutout. Be sure the tabs extend after the installation for a secure fit.

To remove the timer from the adapter, unclip the two retaining clips at the back of the adapter. To remove the adapter and timer from the panel as a unit, compress the tabs behind the panel and push the unit out the front of the panel.

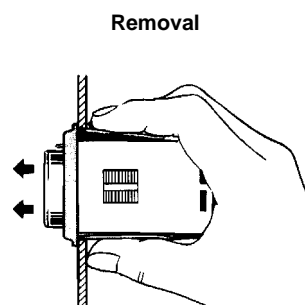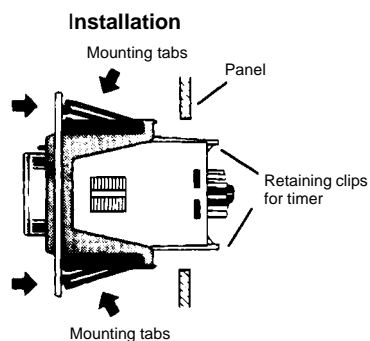

Precautions

To avoid malfunction or damage, do not change the time unit or time range while the timer is in operation. Be sure to turn off the power supply to the timer before changing any of the selections.

NOTE: DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters to inches divide by 25.4.

OMRON[®]
OMRON ELECTRONICS, INC.
One East Commerce Drive
Schaumburg, IL 60173
1-800-55-OMRON

OMRON CANADA, INC.
885 Milner Avenue
Scarborough, Ontario M1B 5V8
416-286-6465